


Installation Manual

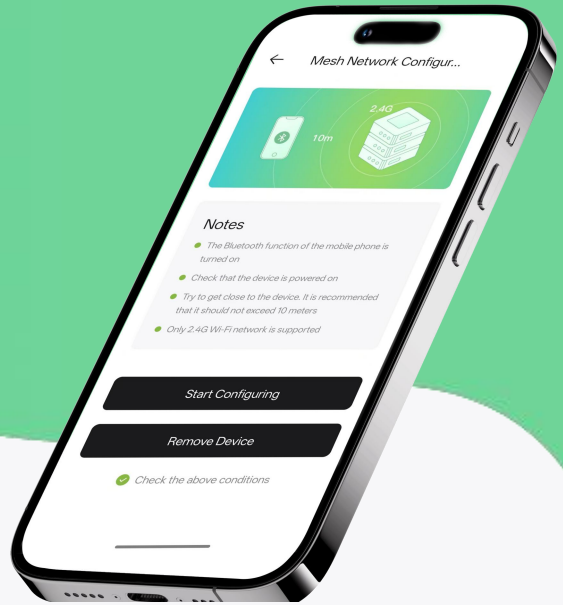


step 1

Register an account


- 1 . Click the "Register" button
- 2 . Fill in your account + password and log in



Download and install

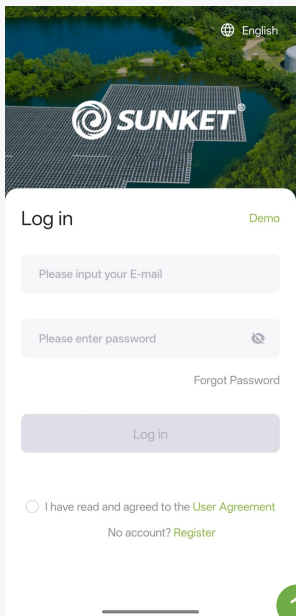

1

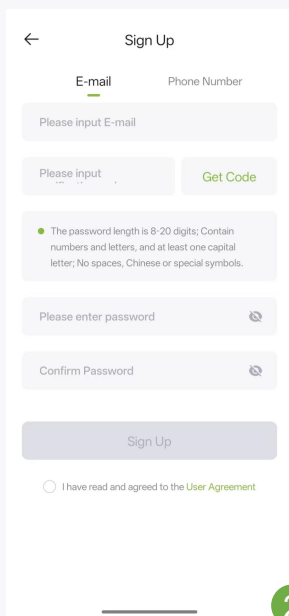


2


Step 2

Create a power station and add equipment


1. Click the "+" button in the upper right corner of "Figure 3"
2. Select the "Inverter" option and scan the "WIFI SN" QR code on the device
3. Fill in relevant information & generate power station

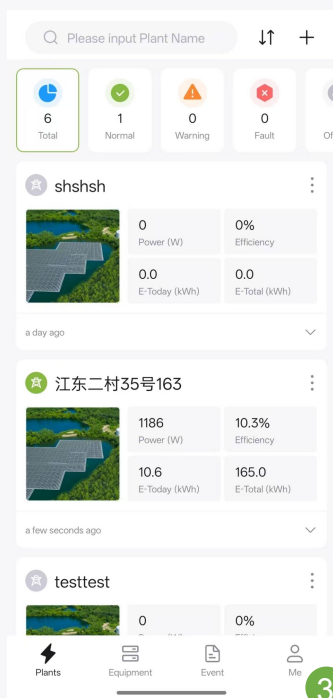

3

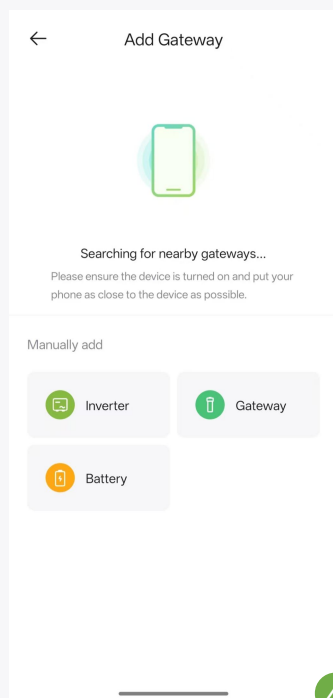

4

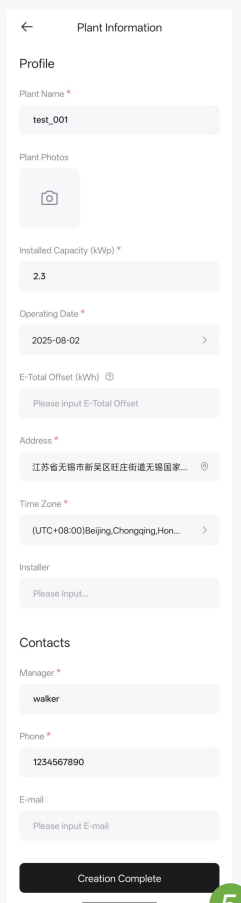

5

Step 3


MESH network configuration (WIFI network configuration)

1. Click the "Me" button & click the Tools button & click the "Mesh Network Configuration" button.
2. Click the "Start Configuration" button as shown in Figure 7.
3. Select the device that needs network configuration as shown in Figure 8.
4. Select the "Select Router" button.
5. Select to access the Wi-Fi network (2.4GHz band signal required).
6. Manually fill in the WIFI password.
7. Configuration successful & click the "Configuration" button.


8. As shown in Figure 13:

Clicking the "Enable" button requires setting a password to prevent the inverter from being used by anyone other than the owner.


Clicking the "Cancel" button does not require setting a password, allowing anyone to use the inverter.

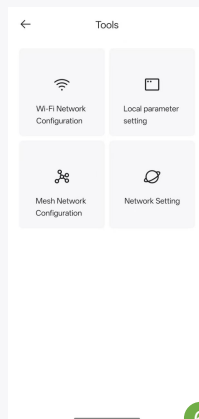


6

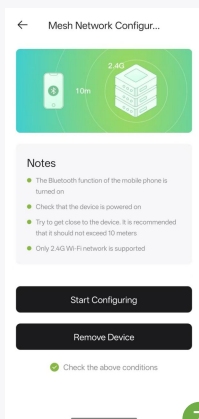


7

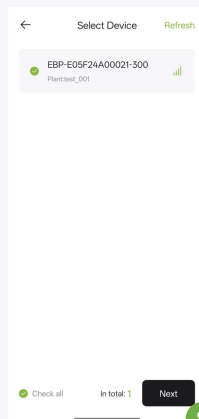


8

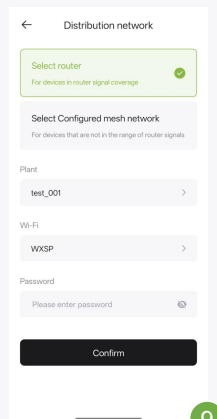


9

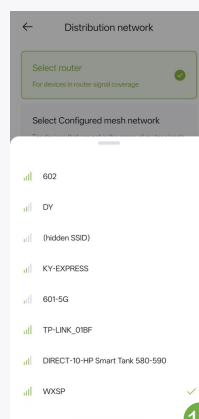


10

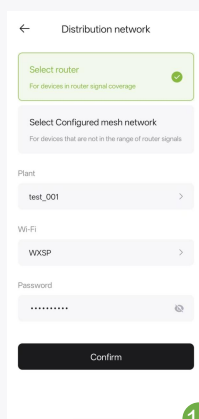

11

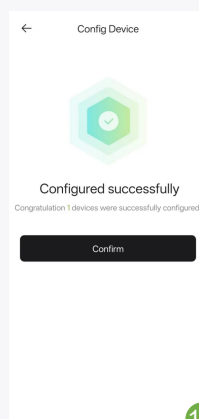

12

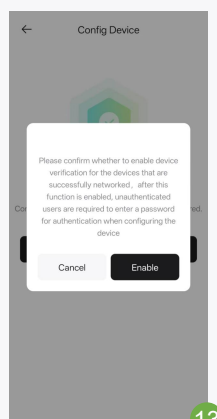

13